

INSTALLATION INSTRUCTIONS

Cladding Le Righe Fineline / Le Righe Fineline Slim


Step -1

Clean carefully the wall surface



Step -2


Mark with a pencil the fixing points the on the wall

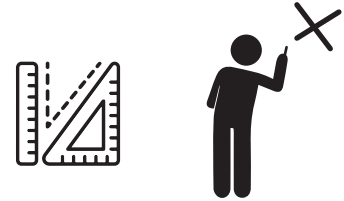

Step -3


Apply the proper sealing glue (silane-based, free of isocyanates and solvents, odourless with high suction effect, adhesive in cartridge).

Extrude beads parallel to each other at a distance of 10 / 15cm one from the other.

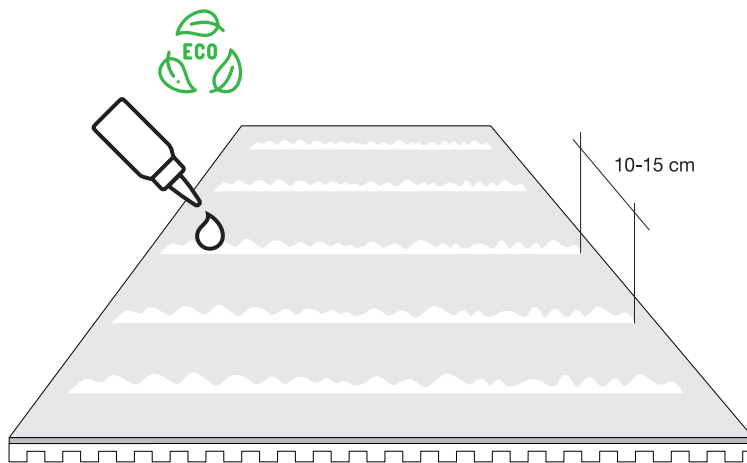

Step -4

Immediate wall fixing

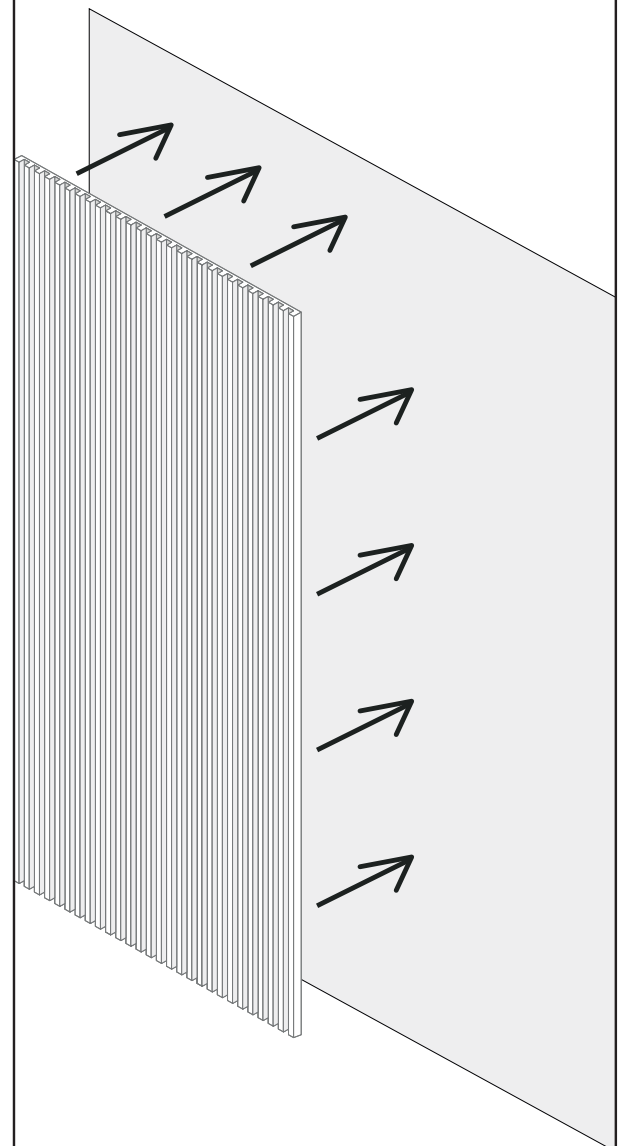

- Fast setting time
- Translucent
- Easy to use with cartridge guns
- Excellent adhesion on several substrates
- Chemical resistant
- Excellent filling capacity